

Boiler instructions




Away
Resorts

Tribeca boiler instructions

Struggling with your boiler? Here are a few things you can try to get it toasty warm in no time. Morco Series II

http://www.morcoproducts.co.uk/resources/2121345_A05_Apr_17_GB24_GB30_ErP_User_Installation_Instructions.pdf

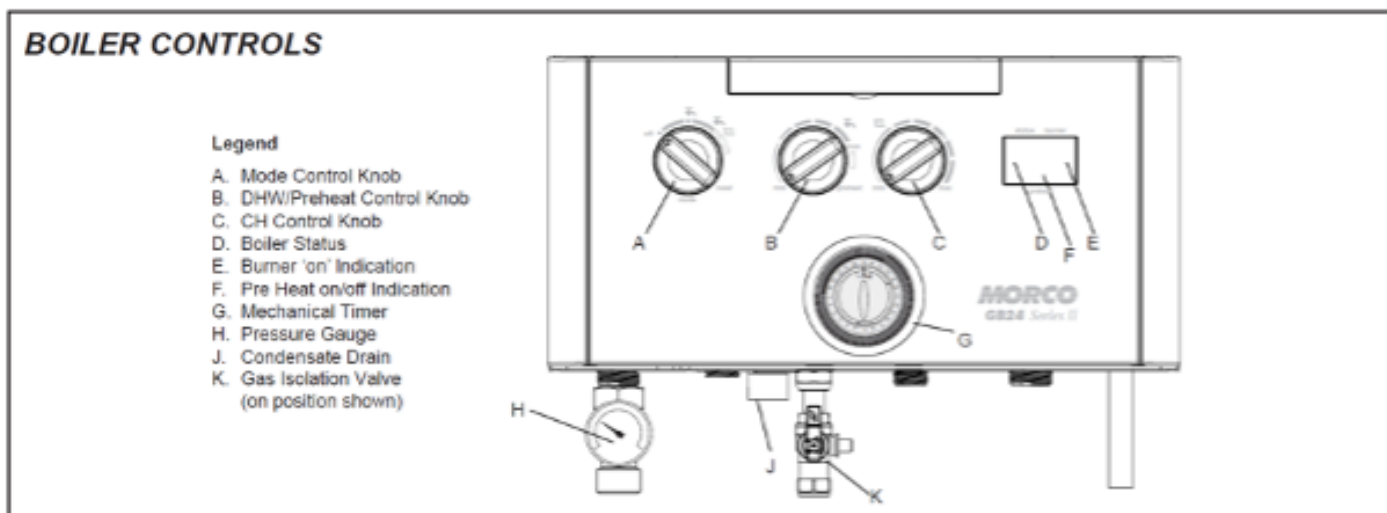

Dial A – This should be set to the water and heating option as shown below.



Dial B - This is the water temperature control and should be set near to “Max” as shown below.



Dial C - This is the central heating control and should be set to the “dot” which is optimum setting as shown below.



Dial G – This is the timer unit dial and can be set to “off”, “timer” or “constant”



Boiler Timer Instructions are as follows:

MECHANICAL 24 HOUR TIMER

PROGRAMMING THE TIMER

1. Decide what times you would like the timeswitch to switch ON and OFF.
2. Push segments towards the programme ring for an OFF period and push away from ring for an ON period. The minimum switching interval is 15 minutes and this can be increased in 15 minute steps.
3. Bring the timeswitch into the correct condition by manually turning the programme ring clockwise through a 24 hour cycle.
4. Turn the programme ring clockwise until the correct time of day on the ring lines up with the time indicator.


Note. The segment dial can be turned when the time controller is operating. In case of power failure, re-adjust the time controller to the correct time of day, turning the dial in a clockwise direction.

Permanent Override

By rotating the central switch so that the symbol (1) lines up with the time indicator (☛) the unit will be permanently ON.

With the symbol (0) lining up with the time indicator (☛) the unit acts as a timeswitch.

With the symbol (0) lining up with the time indicator (☛) the unit will be permanently OFF.

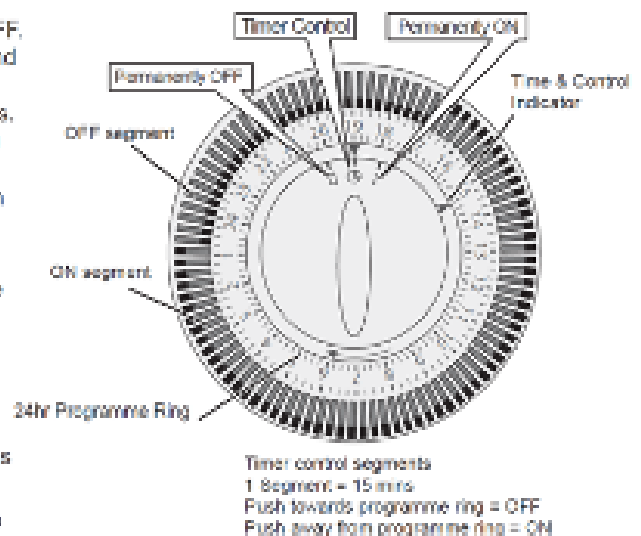

The table below shows the codes on the display and their meanings.

DISPLAY CODE ON BOILER	DESCRIPTION
	The boiler is in standby mode awaiting either a central heating call or hot water demand.
	The boiler has a call for central heating but the appliance has reached the desired temperature set on the boiler.
	The boiler has a call for hot water but the appliance has reached the desired temperature set on the boiler.
	The boiler is operating in central heating mode.
	The boiler is operating in hot water mode.
	The boiler is operating in pre heat mode.
	The water in the central heating circuit is less than 5°C. If heating is switched on, this display code will change to "c".

If you are not receiving any hot water or central heating, please contact a member of the Guest Services team who will be able to assist you.

Away
Resorts