

Dishwasher instructions



*Away
Resorts*

Dishwasher instructions

Belling IDW45 Integrated Dishwasher

Manual - <https://www.belling.co.uk/media/668219/idw45-belling-dishwasher.pdf>



1 - Turn on the dishwasher using the On/Off button.




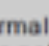 

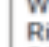 

2 - The default setting will be P3 – ‘Eco Mode ‘ which will be suitable for most cases.

3 - If you are only running a half load, press the load button.





4 - To change the program, press the program button.

Programs are as follows:

Program	Cycle Selection Information	Description of Cycle	Detergent pre/main	Running time(mln)	Energy (Kwh)	Water Rinse (L)	Rinse Aid
P1  Intensive	For heaviest soiled crockery, and normally soiled pots, pans, dishes etc with dried on soiling.	Prewash (50°C) Wash (60°C) Rinse Rinse (70°C) Drying	$\frac{3}{22g}$ (or3in1)	165	1.4	16.5	★
P2  Normal	For normally soiled loads, such as pots, plates, glasses and lightly soiled pans.	Prewash(45°C) Wash (55 °C) Rinse Rinse (65 °C) Drying	$\frac{3}{22g}$ (or3in1)	175	1.1	13	★
P3 ECO (*EN 60242)	This is standard programme, it is suitable to clean normally soiled tableware and it is the most efficient programme in terms of its combined energy and water consumption for that type of tableware.	Prewash Wash (45 °C) Rinse(65°C) Drying	$\frac{3}{22g}$ (or3in1)	190	0.74	9	★
P4  Glass	For lightly soiled crockery and glass	Pre-wash wash(40°C) Rinse Rinse (60°C) Drying	$\frac{3}{22g}$ (Or3in1)	125	0.75	13.5	★
P5  90 Min	For lightly soiled loads that do not need excellent drying efficiency.	Wash(65°C) Rinse Rinse (65°C) Drying	$\frac{25g}{(Or3in1)}$	90	1.15	11.5	★
P6  Rapid	A shorter wash for lightly soiled loads and quick wash.	Wash (45 °C) Rinse Rinse (55 °C)	20g	30	0.7	10	

5 – Insert detergent powder or tablet as shown below.

Belling IDW45 Integrated Dishwasher

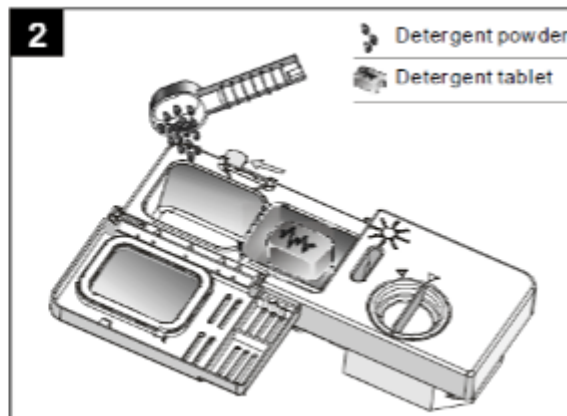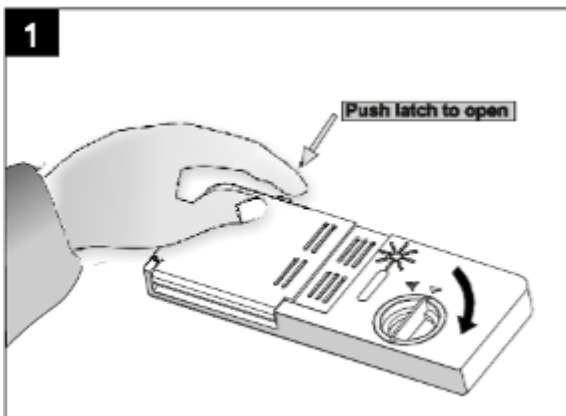



6 - The display panel will show information to you

 
Display screen: to show the error code, delay time etc.

- Rinse Aid indicator: ✱
Indicates when the dispenser needs to be refilled.
- Add salt indicator: Ⓢ
Indicates when the dispenser needs to be refilled.
- Delay time, Program indicators or error codes indicator: 88
- Half load functions indicator: 1/2
- Infall Warning Light : ⚡
Being on When faucets is not opened.

7 - Follow the loading instructions.

Loading the Upper Basket

The upper basket is designed to hold more delicate and lighter dishware such as glasses, coffee and tea cups and saucers, as well as plates, small bowls and shallow pans (as long as they are not too dirty). Position the dishes and cookware so that they will not get moved by the spray of water.

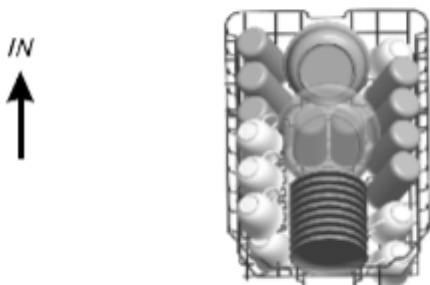

Please be reminded that:

- Pots, serving bowls, etc, must always be placed top down.
- Deep pots should be slanted to allow water to flow out.
- The Bottom Basket features folding spikes so that larger or more pots and pans can be loaded.

Loading the Lower Basket

We suggest that you place large items and the most difficult to clean items are to be placed into the lower basket: such as pots, pans, lids, serving dishes and bowls, as shown in the figure below. It is preferable to place serving dishes and lids on the side of the racks in order to avoid blocking the rotation of the top spray arm.



Ensure any sharp items such as knives are loaded into the cutlery basket pointing down to avoid injury.

8 - Close the door and wait for the cycle to start.

9 - Do not open the door while the cycle is in process.

10 - Once the cycle has finished the machine buzzer will sound for 8 seconds. Open the door carefully and press the On/Off button. Leave the door ajar and wait a few minutes before removing the items from the dishwasher, this will give them a chance to cool.

If the rinse aid, salt indicator, error codes or infall warning light is on please contact Guest Services.

