

Tribeca TV Manuals



*Away
Resorts*

Tribeca 1-5 and 7-14

UE55KS7000 – Samsung 55inch 4k TV

Manual - <https://www.manualslib.com/manual/1196347/Samsung-Ue49k5500.html?>

All remote controls are “OneRemote” Universal Remote Controls

These TVs are all Smart TVs although Netflix and other Smart Streaming Apps will not work with the WiFi. This is for the guests safety as they may forget to log out of their streaming service account and this can leave them vulnerable.

1. All TV’s will turn on using the “On/Standby” button on the remote and will load the home screen.
2. Select “Live TV” on the home screen to access the full range of TV Programs
3. Use “Ch up/Ch down” to change the program
4. Use “EPG” or “Guide” to bring up the program guide and choose a channel this way
5. Use “Volume up/Volume down” to change the volume level
6. To change the source use “Source” button, this will enable you to use the DVD player. Your remote should work for the DVD player too.



Your remote may differ slightly to the one shown in the picture, but will consist of the same buttons. If you have any difficulty with your TV or your remote please contact Guest Services on 01526 348800.

Tribeca 6

65UJ630V-ZA

Manual - https://www.appliancesdirect.co.uk/PDFs/43UJ630V_1_Original.pdf?v=4

All remote controls are “OneRemote” Universal Remote Controls

These TVs are all Smart TVs although Netflix and other Smart Streaming Apps will not work with the WiFi. This is for the guests safety as they may forget to log out of their streaming service account and this can leave them vulnerable.

- 1.** All TV’s will turn on using the “On/Standby” button on the remote and will load the home screen.
- 2.** Select “Live TV” on the home screen to access the full range of TV Programs
- 3.** Use “Ch up/Ch down” to change the program
- 4.** Use “EPG” or “Guide” to bring up the program guide and choose a channel this way
- 5.** Use “Volume up/Volume down” to change the volume level
- 6.** To change the source use “Source” button, this will enable you to use the DVD player. Your remote should work for the DVD player too.



Your remote may differ slightly to the one shown in the picture, but will consist of the same buttons. If you have any difficulty with your TV or your remote please contact Guest Services on 01526 348800.

Tribeca 15

Manual - <https://celloelectronics.com/wp-content/uploads/C55SFS4K-Instruction-manual.pdf>

All remote controls are “OneRemote” Universal Remote Controls

These TVs are all Smart TVs although Netflix and other Smart Streaming Apps will not work with the WiFi. This is for the guests safety as they may forget to log out of their streaming service account and this can leave them vulnerable.

1. All TV’s will turn on using the “On/Standby” button on the remote and will load the home screen.
2. Select “Live TV” on the home screen to access the full range of TV Programs
3. Use “Ch up/Ch down” to change the program
4. Use “EPG” or “Guide” to bring up the program guide and choose a channel this way
5. Use “Volume up/Volume down” to change the volume level
6. To change the source use “Source” button, this will enable you to use the DVD player. Your remote should work for the DVD player too..



Your remote may differ slightly to the one shown in the picture, but will consist of the same buttons. If you have any difficulty with your TV or your remote please contact Guest Services on 01526 348800.